

DOWN *to* EARTH

⚡ CUSTOM & CLASSIC AUTO WIRING ⚡


THE SLINGSHOT

40A INTERNALLY REGULATED MINIATURE ALTERNATOR

Charge Indicator Light does not work like a conventional warning light.

The (L) terminal is positive (12V) when stationary then 0 when running.

Therefore wire the charge/IGN light one side to earth and the other to L the red wire.

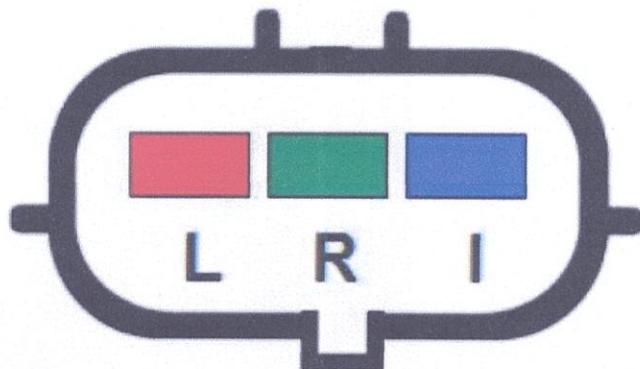

L - Charge indicator light R - 12V When Running - Ignore I - Ignition (+)
Black Wire - Earth White Wire - B+ - Battery Output

Please note Down To Earth Auto Electrics is not responsible for any property damage or personal injuries resulting from improper installation.
Installation by a qualified auto professional is highly recommended - not your best mate.