


## A-47301-AOR 1928-29 Truck Rain Gutter Installation

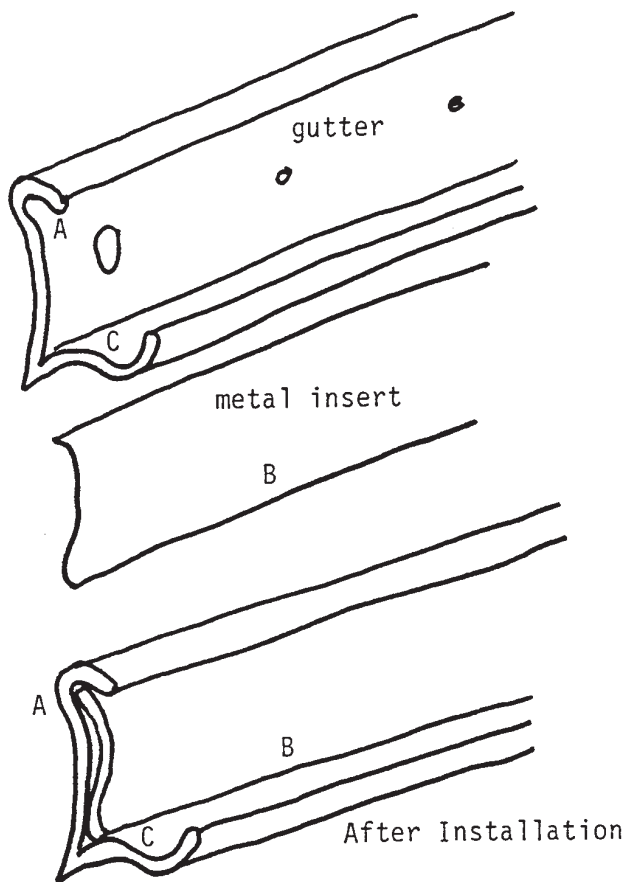

Screw and nail gutter to wood above door with fasteners provided.

Slide top edge of metal insert into top slot in gutter. (marked A)

Using a straight piece of steel and a hammer, force lower edge of insert piece (marked B) over hump in gutter (marked C). A piece of 1/8" x 1" bar stock works well. Attempting to snap the insert into the gutter without using a piece of steel may damage or distort the insert.