
A-11350-M MODERN STARTER DRIVE



STEP 1

Slide starter drive over the starter shaft, gear end first once the drive stops, pry the flat washer back with 2 screwdrivers. Use a thin bladed screwdriver to start the washer and then pry it back the rest of the way with a large bladed screwdriver

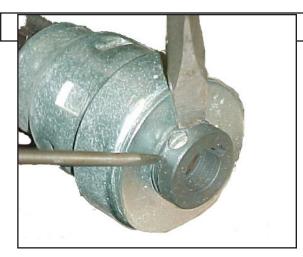

STEP 2

Once you have the washer pryed back far enough, loosen the set screw just far enough that the drive will slide onto the shaft the rest of the way



STEP 3

Insert key into starter shaft.



STEP 4

Slide drive forward over the keyway, pry the washer back to take pressure off of the set screw. Screw the set screw into the hole in the starter shaft until tight, release your large screwdriver allowing the washer to come forward over the head of the set screw.